


INSTRUCTIONS FOR 9500 SERIES TRANSFILL STATIONS



Important!: Prior to filling, empty contents of nursing cylinder in a well ventilated area.

1. Press power button  on handset to turn scale on.
 2. Attach nursing cylinder to nursing cylinder connector.
 3. Place or hang nursing cylinder on scale then press tare. 
 4. Turn nursing cylinder valve counter-clockwise to open valve.
 5. Turn economizer valve counter-clockwise and allow transfill to commence.
 6. Press and hold intermittent On/Off button on back of PTF-400 (brass button).
 7. Monitor the handset; Stop pumping when the cylinder reaches the required fill amount.
- DO NOT OVERFILL!**
8. Turn nursing cylinder valve clockwise to close valve.
 9. Turn economizer valve clockwise just until you hear a slight burst of air and no further.
 10. Disconnect nursing cylinder from the nursing cylinder connector.

For more detailed fill and set-up instructions, refer to the Owner's manual supplied with this pump station.

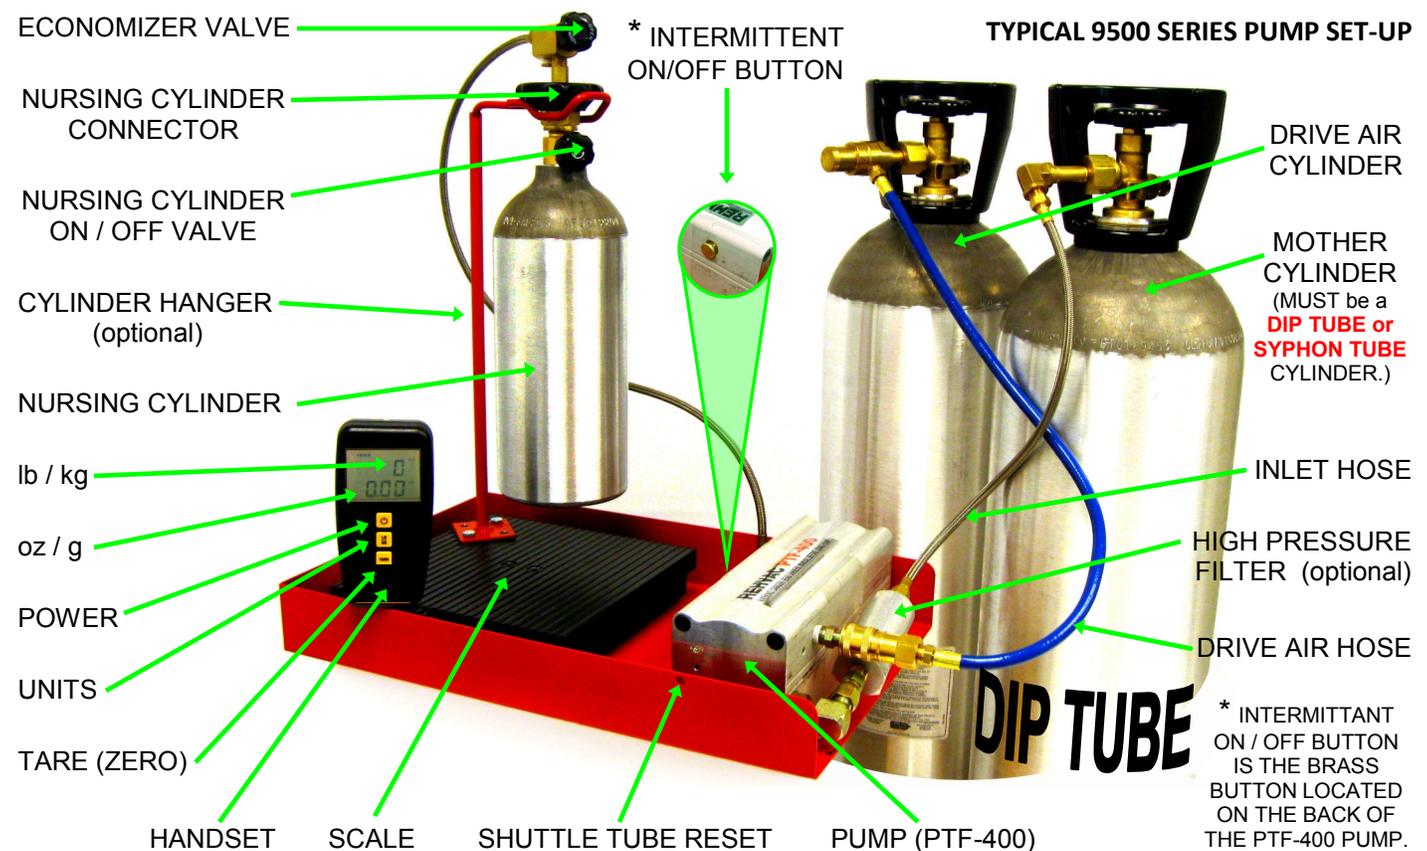

NOTE: READ ALL WARNING LABELS AFFIXED TO CYLINDERS.

STERLING PRESSURE SYSTEMS LLC 4744 Center Park, San Antonio, Texas 78218
 WWW.STERLINGPRESSURESYSTEMS.COM (800) 856-5668

LIT-117 REV7.10